


## Cleaning and Maintenance

- Before cleaning, turn the on/off switch on the Aroma Diffuser to off. Then unplug the plug from the power outlet.
- Empty the water reservoir. Wipe it with a soft, damp cloth.
- Once a week, use a cotton bud to wipe the metal part of the ultrasonic transducer on the bottom of the water reservoir with rubbing alcohol. (Fig. 11)
- (Note: do not wipe the case with rubbing alcohol because it may remove the paint from the case. Use a mild detergent instead.)
- If the appliance has been in use for 2-3 weeks and no longer produces mist or only a reduced amount, clean the transducer as described in the previous step.
- After use, switch off the unit, unplug it from the main power supply and empty all the water out of the reservoir.
- Dry the appliance thoroughly before putting it into storage.
- Clean the appliance before using it after a long period of storage. Store in a dry place.

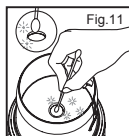

## Troubleshooting

### *No mist produced or mist intensity is less than before:*

PROBABLE CAUSE	REMEDY
No water, or very little water in the water reservoir.	Switch off the diffuser. Fill the reservoir with water and switch it on again.
Water reservoir has overflowed.	Switch off the diffuser. Pour out the excess water.
The operating period of 1 or 2 hours has ended.	Press the power button again to restart the unit.
Insufficient water at protection sensor, or ultrasonic transducer has not been cleaned properly and is dirty.	Clean them properly as described above.
The essential oil is of poor quality.	Try a 100% natural essential oil or blend in the diffuser.
Relative humidity is too high or temperature is too low and has caused the vapor to condense quickly.	Increase air temperature slightly or move the diffuser in a different location.

### *The area around the diffuser, and the surface on which it is standing, is wet.*

PROBABLE CAUSE	REMEDY
The mist has been blown back onto the diffuser and has condensed on its surface.	Place the diffuser in a different position, away from drafts.

## Safety Advice for the Use of Essential Oils and Fragrance Blends

Please carefully read the instructions provided and the information on the label of your essential oils and fragrance blends.

Do not use viscous or coloring essential oils, they can damage the device. For more information, please contact our PRIMAVERA customer service.

## Disposal

Please do not dispose of this unit in general household waste but instead take it to a recycling collection point. These collection points are regulated according to 2002/96/EC and 2006/66/EC, subject to country and legislation.

We reserve the right to make technical changes to the Aroma Diffuser and any substantive changes to these instructions without prior notification.



## Disclaimer

We accept no liability for damage resulting from incorrect use of this product or caused by the use of essential oils.

Model Number:	AI-15908
Operation Mode:	1 hour/2 hours continuous mode, 6 hours interval mode
Water Reservoir Capacity:	approximately 100ml
Ultrasonic Frequency:	1.7 MHz
Power Adaptor (Input):	AC 100 – 240 V (50/60 Hz)
Power Adaptor (Output):	DC 15 V (0.8 A), 9 W
Material:	High quality unglazed ceramic and high quality BPA-free plastic


PRIMAVERA LIFE GMBH  
Naturparadies 1  
87466 Oy-Mittelberg  
Germany  
[www.primaveralife.com](http://www.primaveralife.com)



PRIMAVERA®

# Ambiente

AROMA DIFFUSER

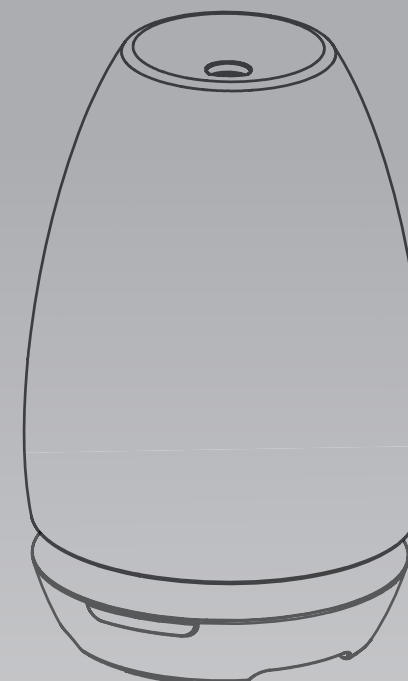

**Important Information  
Regarding Usage and Care**

## Dear Customer,

Thank you for deciding to purchase our PRIMAVERA Aroma Diffuser Ambiente.

To ensure your enjoyment of our Aroma Diffuser, we ask you to please read these instructions carefully and observe all safety precautions. We wish you much joy and wonderfully fragrant hours with this modern and easy-to-use diffuser.

Fragrant greetings from the foothills of the Alps,


Your PRIMAVERA Team

## Modern room scenting and discreet ambient light

- Easy to fill, simple to safely operate
- Three selectable diffuser settings (continuous or interval)
- Three selectable light modes
- Mist and light independently adjustable
- Gentle diffusion by ultrasonic unit
- Automatic safety shutdown
- Easy to clean

## Product Description

- 1 Nozzle
- 2 Ceramic top cover
- 3 Ultrasonic transducer
- 4 Splash cover
- 5 Water reservoir
- 6 Air outlet
- 7 Main body of unit
- 8 Light and mist button
- 9 Power adaptor
- 10 Power jack
- 11 Power socket

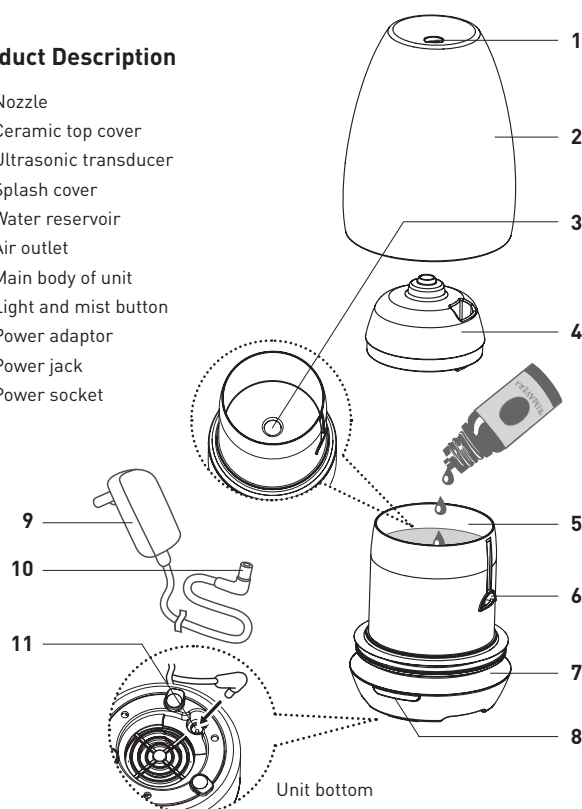

## Please pay attention to these Safety and Operating Instructions for use and filling!

- Place the unit upright in a safe place and on a firm, non-tilting base.
- Unit use indoors only.
- Do not place in water or other liquids.
- If product has been dropped, disconnect the power plug immediately.
- After use, pour out remaining water and pull the power supply plug.
- Store unit in a place inaccessible by children.
- Children or disoriented people may not use the diffuser without proper supervision.
- Before filling with water, always unplug the power supply plug!
- Do not operate when the water reservoir is empty. Turn off the appliance when the water reservoir is empty.
- Never fill the water reservoir directly from the tap. The device could be damaged.
- For the aromatherapy pour 3–5 drops of essential oils into the water.
- Please only use high-quality 100% pure essential oils. Oils of inferior quality can damage the equipment.
- Do not use viscous oils. The device can be damaged.
- Please avoid dripping essential oil on the outside of the device or on furniture. If this accidentally occurs, wipe it off immediately to avoid discoloring the outside of the unit or furniture.
- Place the unit on a level surface so that it cannot tip over.
- Do not open the device during operation because water may spurt out.
- Do not touch the ultrasonic transducer with the device is in operation! Risk of burns!
- Never fill the water reservoir with alcohol, chemicals or corrosive liquids! The device could be damaged!
- This appliance is intended for personal use only. It may only be used for the purposes described herein. Use only as recommended by the manufacturer.
- If you notice any abnormal odors or noise, disconnect the machine immediately by unplugging the power adapter plug! Repairs should only be carried out by qualified personnel.
- For damage caused by improper use, no liability is assumed. In case of damage to the electrical parts, especially when the electrical supply is damaged, the unit must not be put into operation. Please contact us in this case or have the device repaired by authorized personnel. Please do not open the device or electrical parts themselves or make any structural changes. In these cases, your guarantee and warranty is void.

## Commissioning

### PRIOR TO USE

- Pull the ceramic top cover upwards as shown in the image. (Fig. 1)
- Remove splash protection from the water reservoir. (Fig. 2)
- \* Before filling the container, insert the plug at the base of the appliance. (Fig. 3)
- \* Fill the container to the marked line with water. (Fig. 4)

### USING YOUR DIFFUSER

- Do not operate when the water reservoir is empty. Turn off the appliance as soon as the water reservoir is empty.
- Never fill the water reservoir directly from the tap. Make sure that no water gets into the vent. The device could be damaged. (Fig. 5/6)
- If the water reservoir accidentally overfilled (water level above the marked line), pour out the excess water as shown. (Fig. 7)
- Carefully place the splash protection on the unit. (Fig. 8)
- Push down the ceramic top cover at the top of the machine. (Fig. 9)

- For aromatherapy, pour 3–5 drops of essential oil directly into the water. Never put the oil directly into the ultrasonic transducer!

### CONNECT THE DEVICE TO POWER SOURCE

- First insert the power jack in the power socket. Only then plug the power adaptor into the wall socket.

### DISCONNECT THE DEVICE FROM POWER SOURCE

- First disconnect the power adaptor from the wall socket, then disconnect the power jack from the power socket.

### OPERATE THE UNIT

- Press on / off button one time (for the LIGHT): The light turns on in the brightest stage.
- Press the button a second time: The lighting dims.
- Press the button a third time: The lighting goes into effect mode
- Press the button a fourth time or press and hold for 1.5 seconds: The light goes out.
- Pressing the button again, the light comes on again. (Fig. 10)
- NOTE: With this button, the unit can be used only as light if desired.

### ON / OFF BUTTON (DIFFUSION)

- Lighting and diffusion can be switched on separately.
- On / Off (Diffusion)
- On / Off button once: The LED indicator lights on the left; the diffuser operates continuously. The device automatically turns itself off after 1 hour.
- Press the button a second time. The middle LED indicator lights up; the diffuser operates continuously. The unit automatically turns off after 2 hours.
- Press the button a third time. The LED indicator lights on the right; the nebulizer operates in interval mode and generates 20 seconds of fine mist. After a pause of 40 seconds this process is repeated automatically. The device switches off automatically after 6 hours.
- Press the key a fourth time or hold 1.5 seconds or longer to stop diffusion. The LED indicator turns off.

### NOTE

- The two on / off switches for lighting and diffusion can be controlled separately.
- If the timer expires or the water water reservoir is empty, the LED indicator turns off and the diffusion is stopped.
- For the machine to work optimally, it should be turned off after 4 hours continuous operation for at least 30 minutes.

